Assembly instructions

>>> **Assembly packing list**
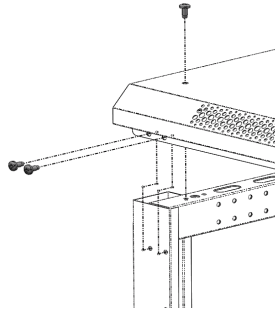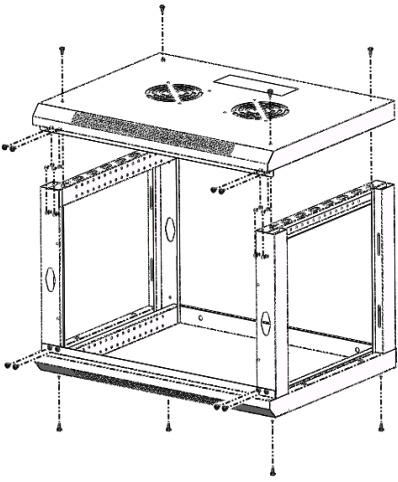
Screws M5	Door Pin	Lock	L Wrench	Mounting Profile	Top cover
Frame	Bottom	Side Panel	Rear Panel		Glass Door

>>> **Exploded-View；**

Side Panel

Frame

Mounting Profile

Glass Door
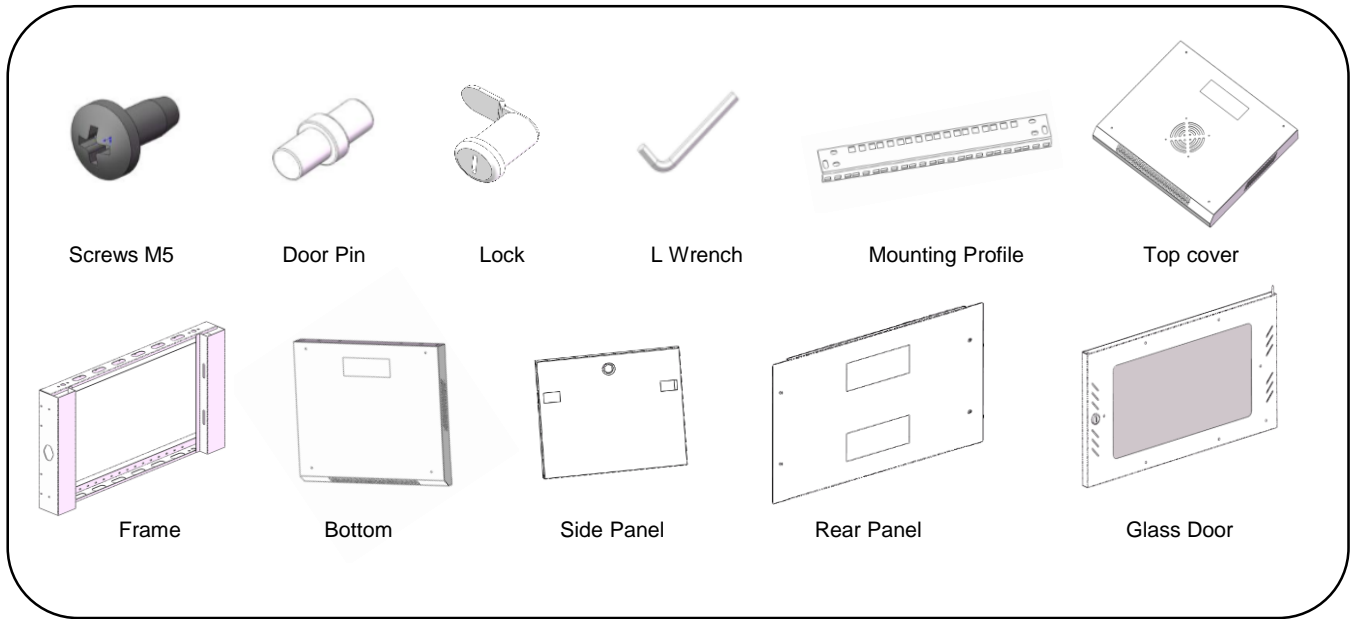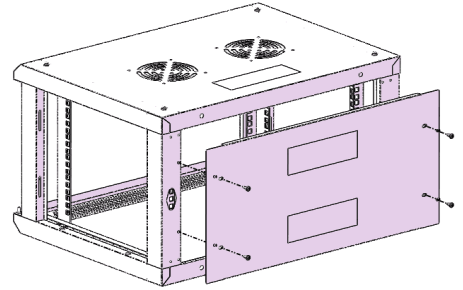
Top Cover

Rear Panel
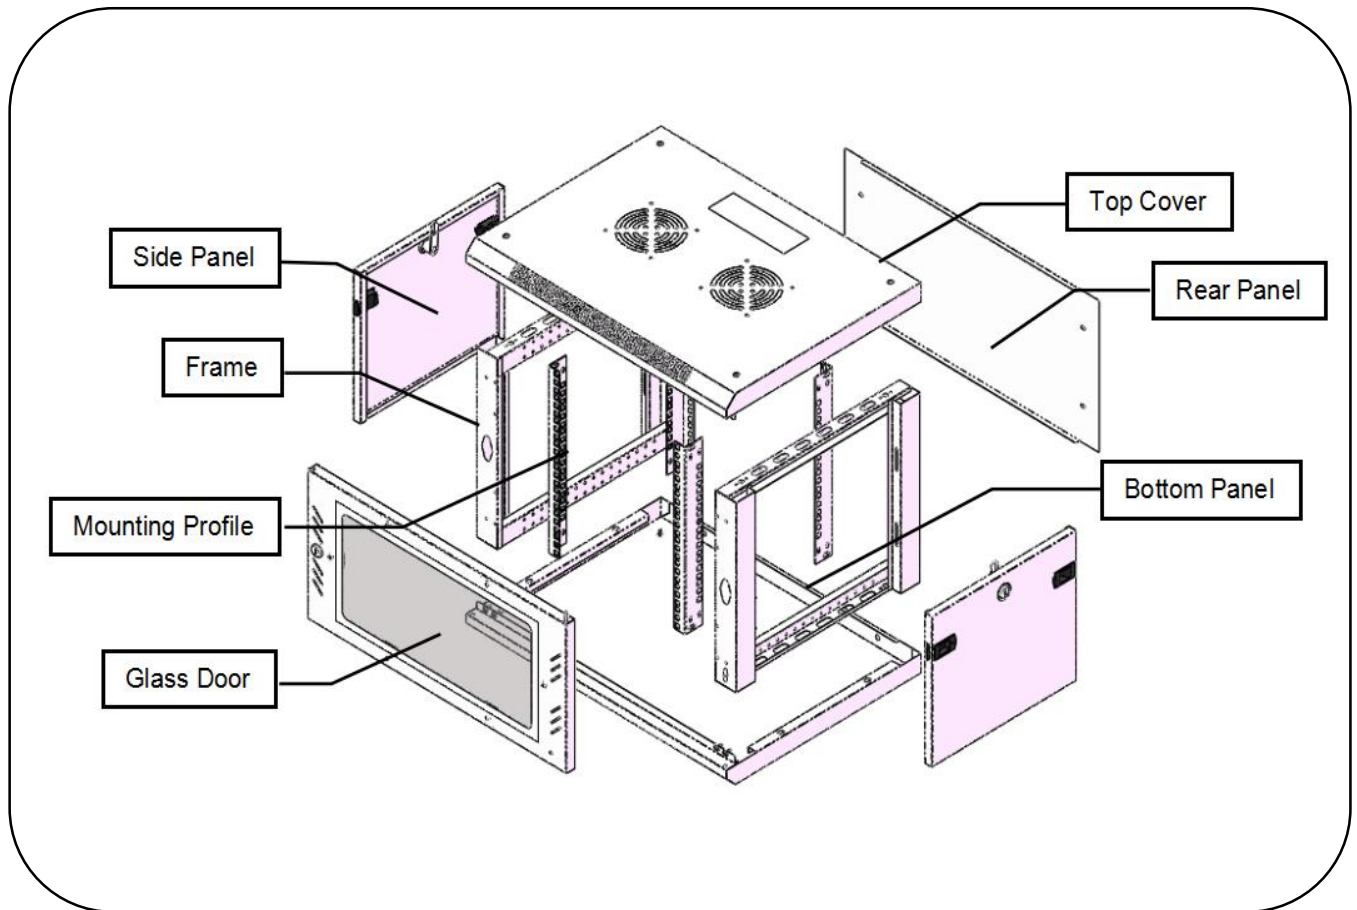
Bottom Panel

Assembly instructions
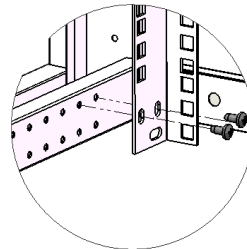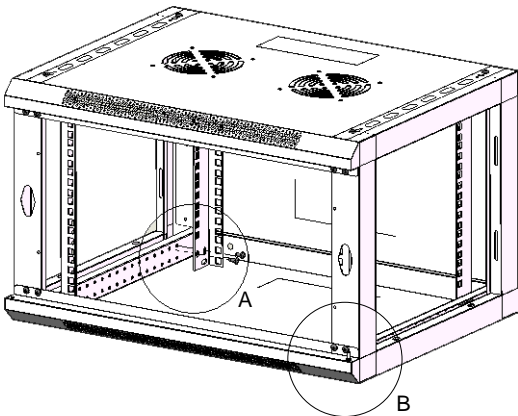
Step 1: Fix the frame;

Fix the top cover and
bottom with 8pcs screws;
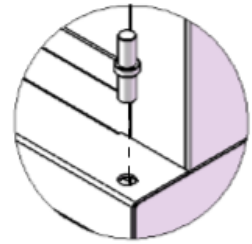Then fasten front frame
with 8pcs screws.

Fix the rear panel
with 4 screws.
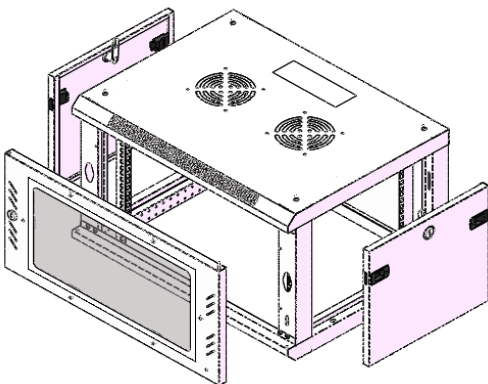
Step 2: Fix the mounting profile;

A Detail

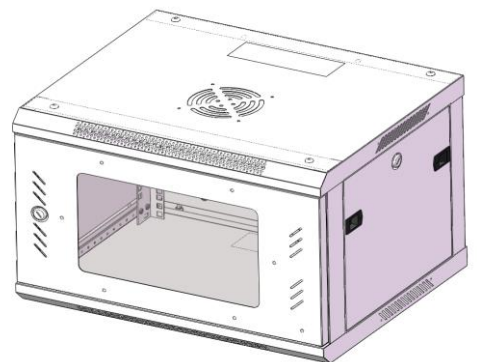Fix the mounting profile
With screws.

B Detail

Fix the door pin.

A

B

Step 3: Fix the door and panel;

Fix the door; Lastly install the side panels.

Complete! Thank you!